


# Sonacle

## User Manual


### Sonacle ANC-2380



## Overview

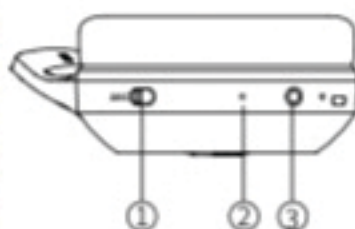

1. ANC switch
2. LED Indicator
3. 3.5mm Audio Socket
4. Microphone

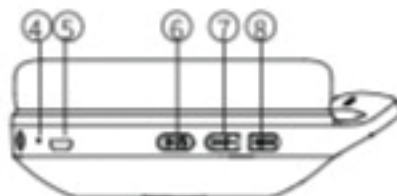

5. Charging Socket
6. Bluetooth Function Switch
7. Volume Down/Previous Track
8. Volume Up/Next Track

### 1. Power switch:

To turn on headphone, press and hold the Bluetooth button until the Status LED blinks blue.  
Press and hold the Bluetooth button again until the Status LED blinks red.  
The headphone is now turned off.

### 2. Multifunction button:

Short Press : Play /pause when music playing or answer the phone call .  
Long Press : Reject the phone call.  
Double Click : Redial the last call.  
Triple Click : Activate the voice assistance.

### 3. ANC on/off:

To start the noise cancellation, slide the ANC button up.  
The ANC LED (nearby the ANC button) will light up in white.  
To turn off the noise cancellation, slide the ANC button down.  
The ANC LED will turn off.  
ANC function can still be used when headphone is turn off.

### 4. Wireless Music Mode:

Long press + to Volume up.      Short press + to play the next song.  
Long press - to Volume down      Short press - to play the previous song.

### 5. Connection:

**Step 1:** Open the Bluetooth setting on your phone or tablet and click "search device".

**Step 2:** You have found the product when the screen displays the character "Sonacle ANC-2380". Click on it in your device to pair the connection .

**Step 3:** The phone or tablet will indicate when the pairing is successful. The character on the display of the product will stop flickering .

**Note:** If no Bluetooth devices are paired within 5 minutes the headphone will turn off.

## 6. Charging:

Connect the USB Charging cable to the charging port(5) and a computer or a USB power adapter. The LED will shine red during charging and turn off when the battery is fully charged.

Note: when connected to a charging source, the bluetooth function of headphone will be stopped, but the ANC can work.

## 7. Specifications:

Bluetooth version:	V 5.4
Driver size:	40 mm
Impedance	32 Ω
Sensitivity:	96 +/- 3 dB
Frequency response:	20 Hz - 20 kHz
Range:	up to 10m
ANC frequency range:	40 Hz - 600 Hz
ANC central frequency:	100 Hz - 300 Hz
Cancellation level:	20dB +/- 3 dB
Battery capacity:	400 mAh
Charging time:	Up to 2.5 to 3 hours
Operating time:	Up to 18h (12h with ANC ON)

## Important Safety Notes

**First-Time Use:** For optimal battery life, make sure to charge your headphone for 1-2 hours before using them for the first time.

**Maintenance:** If you haven't used your headphone for over a month, give a full charge before using again to ensure peak performance.

**Safety Precautions:** Always keep your headphone away from fire and water to avoid damage.

**Protect Your Hearing:** To prevent hearing damage, avoid listening at high volumes for long periods. For your safety, do not use the headphone while driving, cycling, or in any situation where you need to hear your surroundings. As a general guideline, set the volume so you can still hear your own voice when speaking normally while wearing the headphone.